

PANEL WIDTH CHART

(in inches)

Dimensions shown are out-to-out of bearing bars
(Add 1/4" for extended cross rods)

No. of Bars	1/4 Bar	5/16 Bar	3/8 Bar
2	2-5/8	2-11/16	2-3/4
3	5	5-1/16	5-1/8
4	7-3/8	7-7/16	7-1/2
5	9-3/4	9-13/16	9-7/8
6	12-1/8	12-3/16	12-1/4
7	14-1/2	14-9/16	14-5/8
8	16-7/8	16-15/16	17
9	19-1/4	19-5/16	19-3/8
10	21-5/8	21-11/16	21-3/4
11	24	24-1/16	24-1/8
12	26-3/8	26-7/16	26-1/2
13	28-3/4	28-13/16	28-7/8
14	31-1/8	31-3/16	31-1/4
15	33-1/2	33-9/16	33-5/8
16	35-7/8	35-15/16	36