

## PANEL WIDTH CHART (in inches)

Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)

No. of Bars	1/4 Bar	5/16 Bar	3/8 Bar	No. of Bars	1/4 Bar	5/16 Bar	3/8 Bar
2	1-3/16	1-1/4	1-5/16	21	19	19-1/16	19-1/8
3	2-1/8	2-3/16	2-1/4	22	19-15/16	20	20-1/16
4	3-1/16	3-1/8	3-3/16	23	20-7/8	20-15/16	21
5	4	4-1/16	4-1/8	24	21-13/16	21-7/8	21-15/16
6	4-15/16	5	5-1/16	25	22-3/4	22-13/16	22-7/8
7	5-7/8	5-15/16	6	26	23-11/16	23-3/4	23-13/16
8	6-13/16	6-7/8	6-15/16	27	24-5/8	24-11/16	24-3/4
9	7-3/4	7-13/16	7-7/8	28	25-9/16	25-5/8	25-11/16
10	8-11/16	8-3/4	8-13/16	29	26-1/2	26-9/16	26-5/8
11	9-5/8	9-11/16	9-3/4	30	27-7/16	27-1/2	27-9/16
12	10-9/16	10-5/8	10-11/16	31	28-3/8	28-7/16	28-1/2
13	11-1/2	11-9/16	11-5/8	32	29-5/16	29-3/8	29-7/16
14	12-7/16	12-1/2	12-9/16	33	30-1/4	30-5/16	30-3/8
15	13-3/8	13-7/16	13-1/2	34	31-3/16	31-1/4	31-5/16
16	14-5/16	14-3/8	14-7/16	35	32-1/8	32-3/16	32-1/4
17	15-1/4	15-5/16	15-3/8	36	33-1/16	33-1/8	33-3/16
18	16-3/16	16-1/4	16-5/16	37	34	34-1/16	34-1/8
19	17-1/8	17-3/16	17-1/4	38	34-15/16	35	35-1/16
20	18-1/16	18-1/8	18-3/16	39	35-7/8	35-15/16	36