

PANEL WIDTH CHART (in inches)

Dimensions shown are out-to-out of bearing bars
(Add 1/4" for extended cross rods)

No. of Bars	1/4 Bar	No. of Bars	1/4 Bar	No. of Bars	1/4 Bar	No. of Bars	1/4 Bar	No. of Bars	1/4 Bar
2	11/16	19	8-1/8	36	15-9/16	53	23	70	30-7/16
3	1-1/8	20	8-9/16	37	16	54	23-7/16	71	30-7/8
4	1-9/16	21	9	38	16-7/16	55	23-7/8	72	31-5/16
5	2	22	9-7/16	39	16-7/8	56	24-5/16	73	31-3/4
6	2-7/16	23	9-7/8	40	17-5/16	57	24-3/4	74	32-3/16
7	2-7/8	24	10-5/16	41	17-3/4	58	25-3/16	75	32-5/8
8	3-5/16	25	10-3/4	42	18-3/16	59	25-5/8	76	33-1/16
9	3-3/4	26	11-3/16	43	18-5/8	60	26-1/16	77	33-1/2
10	4-3/16	27	11-5/8	44	19-1/16	61	26-1/2	78	33-15/16
11	4-5/8	28	12-1/16	45	19-1/2	62	26-15/16	79	34-3/8
12	5-1/16	29	12-1/2	46	19-15/16	63	27-3/8	80	34-13/16
13	5-1/2	30	12-15/16	47	20-3/8	64	27-13/16	81	35-1/4
14	5-15/16	31	13-3/8	48	20-13/16	65	28-1/4	82	35-11/16
15	6-3/8	32	13-13/16	49	21-1/4	66	28-11/16	83	36-1/8
16	6-13/16	33	14-1/4	50	21-11/16	67	29-1/8		
17	7-1/4	34	14-11/16	51	22-1/8	68	29-9/16		
18	7-11/16	35	15-1/8	52	22-9/16	69	30		