

PANEL WIDTH CHART (in inches)

Dimensions shown are out-to-out of bearing bars

(Add 1/4" for extended cross rods)

No. of Bars	1/8 Bar	3/16 Bar	No. of Bars	1/8 Bar	3/16 Bar
2	3/4	13/16	31	18-7/8	18-15/16
3	1-3/8	1-7/16	32	19-1/2	19-9/16
4	2	2-1/16	33	20-1/8	20-3/16
5	2-5/8	2-11/16	34	20-3/4	20-13/16
6	3-1/4	3-5/16	35	21-3/8	21-7/16
7	3-7/8	3-15/16	36	22	22-1/16
8	4-1/2	4-9/16	37	22-5/8	22-11/16
9	5-1/8	5-3/16	38	23-1/4	23-5/16
10	5-3/4	5-13/16	39	23-7/8	23-15/16
11	6-3/8	6-7/16	40	24-1/2	24-9/16
12	7	7-1/16	41	25-1/8	25-3/16
13	7-5/8	7-11/16	42	25-3/4	25-13/16
14	8-1/4	8-5/16	43	26-3/8	26-7/16
15	8-7/8	8-15/16	44	27	27-1/16
16	9-1/2	9-9/16	45	27-5/8	27-11/16
17	10-1/8	10-3/16	46	28-1/4	28-5/16
18	10-3/4	10-13/16	47	28-7/8	28-15/16
19	11-3/8	11-7/16	48	29-1/2	29-9/16
20	12	12-1/16	49	30-1/8	30-3/16
21	12-5/8	12-11/16	50	30-3/4	30-13/16
22	13-1/4	13-5/16	51	31-3/8	31-7/16
23	13-7/8	13-15/16	52	32	32-1/16
24	14-1/2	14-9/16	53	32-5/8	32-11/16
25	15-1/8	15-3/16	54	33-1/4	33-5/16
26	15-3/4	15-13/16	55	33-7/8	33-15/16
27	16-3/8	16-7/16	56	34-1/2	34-9/16
28	17	17-1/6	57	35-1/8	35-3/16
29	17-5/8	17-11/16	58	35-3/4	35-13/16
30	18-1/4	18-5/16			