

<div>PANEL WIDTH CHART</div> <div>(in inches)</div> <div>Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)</div>		
No. of Bars	1/8 Bar	3/16 Bar
2	15/16	1
3	1-3/4	1-13/16
4	2-9/16	2-5/8
5	3-3/8	3-7/16
6	4-3/16	4-1/4
7	5	5-1/16
8	5-13/16	5-7/8
9	6-5/8	6-11/16
10	7-7/16	7-1/2
11	8-1/4	8-5/16
12	9-1/16	9-1/8
13	9-7/8	9-15/16
14	10-11/16	10-3/4
15	11-1/2	11-9/16
16	12-5/16	12-3/8
17	13-1/8	13-3/16
18	13-15/16	14
19	14-3/4	14-13/16
20	15-9/16	15-5/8
21	16-3/8	16-7/16
22	17-3/16	17-1/4
23	18	18-1/16
24	18-13/16	18-7/8
25	19-5/8	19-11/16
26	20-7/16	20-1/2
27	21-1/4	21-5/16
28	22-1/16	22-1/8
29	22-7/8	22-15/16
30	23-11/16	23-3/4
31	24-1/2	24-9/16
32	25-5/16	25-3/8
33	26-1/8	26-3/16
34	26-15/16	27
35	27-3/4	27-13/16
36	28-9/16	28-5/8
37	29-3/8	29-7/16
38	30-3/16	30-1/4
39	31	31-1/16
40	31-13/16	31-7/8
41	32-5/8	32-11/16
42	33-7/16	33-1/2
43	34-1/4	34-5/16
44	35-1/16	35-1/8
45	35-7/8	35-15/16