

PANEL WIDTH CHART

(in inches)

Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)

No. of Bars	1/8 Bar	3/16 Bar
2	1-1/16	1-1/8
3	2	2-1/16
4	2-15/16	3
5	3-7/8	3-15/16
6	4-13/16	4-7/8
7	5-3/4	5-13/16
8	6-11/16	6-3/4
9	7-5/8	7-11/16
10	8-9/16	8-5/8
11	9-1/2	9-9/16
12	10-7/16	10-1/2
13	11-3/8	11-7/16
14	12-5/16	12-3/8
15	13-1/4	13-5/16
16	14-3/16	14-1/4
17	15-1/8	15-3/16
18	16-1/16	16-1/8
19	17	17-1/16
20	17-15/16	18
21	18-7/8	18-15/16
22	19-13/16	19-7/8
23	20-3/4	20-13/16
24	21-11/16	21-3/4
25	22-5/8	22-11/16
26	23-9/16	23-5/8
27	24-1/2	24-9/16
28	25-7/16	25-1/2
29	26-3/8	26-7/16
30	27-5/16	27-3/8
31	28-1/4	28-5/16
32	29-3/16	29-1/4
33	30-1/8	30-3/16
34	31-1/16	31-1/8
35	32	32-1/16
36	32-15/16	33
37	33-7/8	33-15/16
38	34-13/16	34-7/8
39	35-3/4	35-13/16