

PANEL WIDTH CHART

(in inches)

Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)

| No. of Bars | 3/16 Bar | No. of Bars | 3/16 Bar |
|-------------|----------|-------------|----------|
| 2 | 1-1/8 | 21 | 18-15/16 |
| 3 | 2-1/16 | 22 | 19-7/8 |
| 4 | 3 | 23 | 20-13/16 |
| 5 | 3-15/16 | 24 | 21-3/4 |
| 6 | 4-7/8 | 25 | 22-11/16 |
| 7 | 5-13/16 | 26 | 23-5/8 |
| 8 | 6-3/4 | 27 | 24-9/16 |
| 9 | 7-11/16 | 28 | 25-1/2 |
| 10 | 8-5/8 | 29 | 26-7/16 |
| 11 | 9-9/16 | 30 | 27-3/8 |
| 12 | 10-1/2 | 31 | 28-5/16 |
| 13 | 11-7/16 | 32 | 29-1/4 |
| 14 | 12-3/8 | 33 | 30-3/16 |
| 15 | 13-5/16 | 34 | 31-1/8 |
| 16 | 14-1/4 | 35 | 32-1/16 |
| 17 | 15-3/16 | 36 | 33 |
| 18 | 16-1/8 | 37 | 33-15/16 |
| 19 | 17-1/16 | 38 | 34-7/8 |
| 20 | 18 | 39 | 35-13/16 |