

## PANEL WIDTH CHART (in inches)

Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)

No. of Bars	1/4 Bar	5/16 Bar	3/8 Bar
2	1-5/8	1-11/16	1-3/4
3	3	3-1/16	3-1/8
4	4-3/8	4-7/16	4-1/2
5	5-3/4	5-13/16	5-7/8
6	7-1/8	7-3/16	7-1/4
7	8-1/2	8-9/16	8-5/8
8	9-7/8	9-15/16	10
9	11-1/4	11-5/16	11-3/8
10	12-5/8	12-11/16	12-3/4
11	14	14-1/16	14-1/8
12	15-3/8	15-7/16	15-1/2
13	16-3/4	16-13/16	16-7/8
14	18-1/8	18-3/16	18-1/4
15	19-1/2	19-9/16	19-5/8
16	20-7/8	20-15/16	21
17	22-1/4	22-5/16	22-3/8
18	23-5/8	23-11/16	23-3/4
19	25	25-1/16	25-1/8
20	26-3/8	26-7/16	26-1/2
21	27-3/4	27-13/16	27-7/8
22	29-1/8	29-3/16	29-1/4
23	30-1/2	30-9/16	30-5/8
24	31-7/8	31-15/16	32
25	33-1/4	33-5/16	33-3/8
26	34-5/8	34-11/16	34-3/4
27	36	36-1/16	36-1/8