

PANEL WIDTH CHART (in inches) Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)			
No. of Bars	3/16 Bar	No. of Bars	3/16 Bar
2	5/8	43	18-9/16
3	1-1/16	44	19
4	1-1/2	45	19-7/16
5	1-15/16	46	19-7/8
6	2-3/8	47	20-5/16
7	2-13/16	48	20-3/4
8	3-1/4	49	21-3/16
9	3-11/16	50	21-5/8
10	4-1/8	51	22-1/16
11	4-9/16	52	22-1/2
12	5	53	22-15/16
13	5-7/16	54	23-3/8
14	5-7/8	55	23-13/16
15	6-5/16	56	24-1/4
16	6-3/4	57	24-11/16
17	7-3/16	58	25-1/8
18	7-5/8	59	25-9/16
19	8-1/16	60	26
20	8-1/2	61	26-7/16
21	8-15/16	62	26-7/8
22	9-3/8	63	27-5/16
23	9-13/16	64	27-3/4
24	10-1/4	65	28-3/16
25	10-11/16	66	28-5/8
26	11-1/8	67	29-1/16
27	11-9/16	68	29-1/2
28	12	69	29-15/16
29	12-7/16	70	30-3/8
30	12-7/8	71	30-13/16
31	13-5/16	72	31-1/4
32	13-3/4	73	31-11/16
33	14-3/16	74	32-1/8
34	14-5/8	75	32-9/16
35	15-1/16	76	33
36	15-1/2	77	33-7/16
37	15-15/16	78	33-7/8
38	16-3/8	79	34-5/16
39	16-13/16	80	34-3/4
40	17-1/4	81	35-3/16
41	17-11/16	82	35-5/8
42	18-1/8	83	36-1/16