

PANEL WIDTH CHART (in inches)

Dimensions shown are out-to-out of bearing bars (Add 1/4" for extended cross rods)

No. of Bars	1/4 Bar	No. of Bars	1/4 Bar	No. of Bars	1/4 Bar
2	1-3/16	15	13-3/8	28	25-9/16
3	2-1/8	16	14-5/16	29	26-1/2
4	3-1/16	17	15-1/4	30	27-7/16
5	4	18	16-3/16	31	28-3/8
6	4-15/16	19	17-1/8	32	29-5/16
7	5-7/8	20	18-1/16	33	30-1/4
8	6-13/16	21	19	34	31-3/16
9	7-3/4	22	19-15/16	35	32-1/8
10	8-11/16	23	20-7/8	36	33-1/16
11	9-5/8	24	21-13/16	37	34
12	10-9/16	25	22-3/4	38	34-15/16
13	11-1/2	26	23-11/16	39	35-7/8
14	12-7/16	27	24-5/8		